





## CHFT8C

# **Steering Wheel Control Interface** for select Fiat vehicles



















**INSTRUCTION MANUAL** 



#### CHFT8C

Fiat steering wheel control interface for Fiatvehicleswith CAN-Bus.


### **Product Contents**

- 1. Interface
- 2. Harness
- 3. Instruction

## **Application**

Ducato - 2008 - 2014

Non amplified vehicles

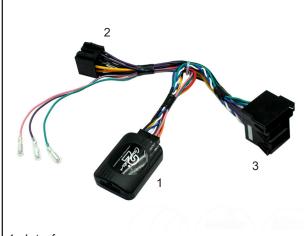

- 1. Interface
- 2. Male Power/Speaker ISOconnector
- 3. Vehicle Specific Connector

#### Prior to installation

Read the manual prior to installation. Technical knowledge isnecessary for installation. The place of installationmust be free of moisture and away from heat sources. Pleaseensure you use the correct tools to avoid damage to the vehicle or product.

Aerpro can not be held responsible for the installation of this product.

## **Technical Support**

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia

TEL: 03 – 8587 8898 FAX: 03 – 8587 8866 Mon-Fri 9am – 5pm AEST. If you would like to download a digital copy of this

manual, or other Aerpro manuals/software, please visit the http://aerpro.com website.

#### **FITTING GUIDE**

- 1. Remove and disconnect the original head unit.
- 2. Connect the 12 way molex connector of the head unit patch lead (supplied separately) to the interface.



3. Connect the opposite end of head unit patch lead to the head unit steering wheel control input on the back of the aftermarket head unit. Thismay be a 3.5mm jack plug or a wire input depending upon the head unit brand being fitted. Please see the head unit installation manual for further information on where to connect.

Important Note: Thisstep must be completed before connecting power to the interface. Failure to so do may result in no steering wheel control function.



4. Connect the 14 way molex connector to the interface.



#### **FITTING GUIDE**

5. Connect the male power/speaker ISOharnessto the female power/speaker ISOharnessfrom the aftermarket head unit.



 


Foraftermarket head unitswhich do not have an ISOconnector the interface usesthe following wiring colours:

Wire Colour	Function
Yellow	Permanent 12V
Black	Ground
Red	12V Ignition
Orange	Illumination
Blue	Antenna Remote
Pink	Speed Pulse
Green	Park Brake
Purple	Reverse

Wire Colour	Function
Purple	Right Rear Speaker +
Purple/Black	Righ Rear Speaker -
Green	Left Rear Speaker +
Green/Black	Left Rear Speaker -
Grey	Right Front Speaker +
Grey/Black	Right Front Speaker -
White	Left Front Speaker +
White/Black	Left Front Speaker -

6. Connect the female vehicle specific connector to the male vehicle connector. Testhead unit for correct operation.





Interface Connector

#### STEERINGWHEEL CONTROL FUNCTIONS





Source

Seek/Track +

Seek/Track -

Pick Up