

STEERING WHEEL CONTROL INTERFACE TO SUIT MERCEDES BENZ VEHICLES

SWMCOOC



INSTALLATION GUIDE

The SWMCOOC allows for the retention of the steering wheel controls as well as other vital features when installing an aftermarket unit into the vehicle. This interface features selectable dipswitches for dedicated applications, simply refer to the provided table for the correct configuration ensuring seamless integration.

VEHICLE APPLICATION

To Suit MERCEDES-BENZ

	LICEPE	
	uadlock (Fak	
A-Class	W169	2004-2012
B-Class	W245	2005-2011
C-Class	W203	2004-2007
R-Class	W251	2007-2013
CLK	W209	2004-2009
SLK	R171	2008-2011
ML	W164	2005-2011
Viano	W639	2006-2015
Vito	W639	2006-2015
Sprinter	W906	2006-2018
VW Crafter		2012-2014
Harness-B IS		
	W169	2005-2012
	W245	2005-2011
C-Class	W203	2000-2004
	W639	2004-2015
Sprinter	W906	2006-2018
Smart ForFo	ur W454	2004-2006
VW Crafter		2006-2017
Harness-C M		
A-Class	W169	2005-2012
B-Class	W245	2005-2011
C-Class	W203	2000-2004
Viano	W639	2004-2015

W639

2004-2015

Vito

KEY FEATURES

- RETAIN STEERING WHEEL CONTROL FUNCTIONALITY
- REPLACE FACTORY RADIO
- OUTPUTS FOR SPEED PULSE, PARK BRAKE & REVERSE
- CAN BUS INTERFACE
- SOFTWARE UPDATEABLE
- REMAPPABLE BUTTONS

PRIOR TO INSTALLATION

Installation requires a certain level of technical knowledge. Prior to installation, it is important to read the manual. Select a location for installation that is dry and free from heat sources. It is essential to use the correct tools during installation to prevent any damage to the vehicle or the product itself. Please note that we cannot be held liable for any issues arising from improper installation.

Before proceeding with installation, disconnect the negative battery terminal and ensure the key is removed from the ignition.

WIRING KEY

Green	Left Rear Speaker +	Grey Grey/Black White White/Black	Right Front Speaker + Right Front Speaker - Left Front Speaker + Left Front Speaker -	Yellow Black Red Orange	Permanent 12V Ground Ignition 12V Illumination
Pink	Speed Pulse - 0 to 12V Square Wave @ 1Hz/Kph	Purple/White	Reverse Gear - 250mA		
Green	Park Brake				
-	Purple/Black Green Green/Black Pink	Purple/Black Right Rear Speaker - Green Left Rear Speaker + Green/Black Left Rear Speaker - Pink Speed Pulse - 0 to 12V Square Wave @ IHz/Kph	Purple/Black Right Rear Speaker - Green Grey/Black Grey/Black Green/Black Left Rear Speaker + Green/Black White White/Black Pink Speed Pulse - 0 to 12V Square Wave @ IHz/Kph Purple/White	Purple/Black Right Rear Speaker - Green Grey/Black Right Front Speaker + White Right Front Speaker + Left Front Speaker + White/Black Left Front Speaker - Hront Speaker - Pink Speed Pulse - 0 to 12V Square Wave @ IHz/Kph Purple/White Reverse Gear - 250mA	Purple/Black Right Rear Speaker - Green Grey/Black Right Front Speaker - Left Rear Speaker + White Black Red Green/Black Left Rear Speaker + Green/Black Left Rear Speaker - Left Front Speaker + White/Black Left Front Speaker - Left Front Speaker - Orange Black Pink Speed Pulse - 0 to 12V Square Wave @ IHz/Kph Purple/White Reverse Gear - 250mA Speaker - Drange

Standby Current <3mA

Operating Voltage 6V to 16V

Operating Temperature -20C to 85C *rated at 25 degrees Centigrade

DIPSWITCH CONFIGURATION

 
		DIPSWITCH CONFIGURATION				
MANUFACTURER	SYSTEM	1	2	3	4	CONNECTION
RESERVED	NA	OFF	OFF	OFF	OFF	SOFTWARE UPDATE MODE
AERPRO	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
ALPINE	IR DATA	OFF	ON	OFF	OFF	MALE 3.5MM JACK
ANALOG SINGLE EXTEND	Analog	ON	ON	ON	ON	BROWN SWC IR
ANALOG SINGLE WIRE	Analog	ON	ON	ON	OFF	BROWN SWC IR
CLARION	IR DATA	ON	OFF	OFF	ON	MALE 3.5MM JACK
сизтом	IR DATA	ON	OFF	ON	OFF	HEAD UNIT DEPENDANT
GRUNDIG	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
JVC	IR DATA	OFF	OFF	ON	OFF	BROWN SWC IR
KENWOOD 1	IR DATA	ON	OFF	OFF	OFF	BROWN SWC IR
KENWOOD 2	IR DATA	ON	ON	OFF	OFF	BROWN SWC IR
KEY 1 / KEY 2	Analog	OFF	ON	ON	OFF	KEY1 / KEY 2 WIRES
KEY 1 / KEY 2 EXTEND	Analog	OFF	ON	ON	ON	KEY1 / KEY 2 WIRES
PHILIPS	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
PIONEER 1	Analog	OFF	OFF	OFF	ON	MALE 3.5MM JACK
PIONEER 2	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
SONY	Analog	ON	OFF	ON	ON	MALE 3.5MM JACK

DIPSWITCH 5 & 6

 
Dipswitch 5 & 6 are reserved for vehicle specific configuration.

KEY1 and KEY2	KEY1 and KEY2 are specifically tailored for analog learning mode-style radios. Our SWC module is designed with a resistor chain that precisely matches the required resistance for seamless compatibility with this type of head unit.
KEY1 and KEY2 EXTEND	This mode extends every button press to 2 seconds during the learning process. However, with rolly wheel-designed steering wheel buttons, holding for 2 seconds isn't feasible. Our KEY1 and KEY2 extend feature addresses this by automatically prolonging each press, simplifying head unit programming even in such scenarios. Extend mode is not intended for normal use, it is only used in the teaching process.
ANALOG SINGLE WIRE and ANALOG SINGLE WIRE EXTEND	This function operates similarly to KEY1 and KEY2 but transmits all unique values through the IR SWC single wire. This is crucial for compatibility with learning-style head units featuring only one learning input wire. To ensure compatibility, we've incorporated this feature into our steering wheel control interface, ensuring seamless operation across various head unit setups. The Analog Extend mode functions identically to its counterpart within the KEY1 and KEY2 system but transmits through a single wire.

SWC INTERFACE









18 PIN HARNESS CONNECTOR DIPSWITCHES

16-PIN HEAD UNIT CONNECTION LEAD USB-C

 
CONNECTION GUIDE

BEFORE INSTALLATION

Prior to installing the interface, it is essential to remove and disconnect the factory stereo. For guidance on this process, please refer to the vehicle owner's manual/handbook or seek assistance from a professional.

SETTING THE DIPSWITCHES

This interface includes a set of dipswitches. Consult the dipswitch selection guide to select the appropriate configuration. To activate a dipswitch, press it downward into the 'ON' position. Refer to the diagram for an example of the 'KENWOODI' dipswitch configuration.



INSTALLATION

1. Take the interface, then connect the 16-PIN head unit connection lead and the 18-PIN steering wheel harness connectors to their respective ports.

2. Connect the head unit connection lead to the steering wheel remote input on the rear side of the aftermarket stereo. Connection methods vary based on the stereo brand, utilising either a 3.5mm jack connector SWC IR wire or wired inputs KEY1 and KEY2. For specific connection guidance, refer to your aftermarket stereo's installation manual if not clearly labelled on the stereo harness.

3. Connect the power/speaker ISO connector from the interface to the corresponding power/speaker ISO connection on the aftermarket stereo.

For aftermarket stereos lacking an ISO connector, refer to the "Wiring Key" on Page 2 for guidance on connecting wires. Certain interfaces may also include extra "flying" wires for additional functionalities such as parking brake trigger, reverse gear, and speed pulse. Further information on these wires is available in the "Flying Wire Wiring Key" section.

4. Connect the vehicle-specific connectors from the interface harness to the corresponding connectors on the vehicle harness.

5. Connect the flying wires on the harness to the rear of the stereo (iff applicable).

6. Connect the antenna adapter to the vehicle's existing connection at the rear of the aftermarket stereo.

7. When installing an aftermarket reverse camera, connect the yellow RCA from the harness to the yellow RCA of the aftermarket camera. (If supported by the interface and vehicle)

8. When installing a DAB antenna, ensure to connect the DAB aerial connector to the rear of the new stereo.

9. After connecting all wires (along with any additional accessories), it's crucial to thoroughly test the stereo and steering wheel controls before reassembling the dashboard. If steering wheel controls are unresponsive, inspect connections and check dipswitch settings. Repeat the connection process if necessary, following the outlined steps.

STEERING WHEEL CONTROL CONFIGURATION



- A Volume Up
- B Volume Down
- C Track Up
- D Track Down
- E Pick Up
- F Hang Up

The provided diagram, while meticulously researched, serves as an example only. Actual steering wheel control configurations may vary dependant on each vehicle.

BUTTON REMAPPING

The steering wheel buttons listed offer the flexibility of being re-configured or assigned dual functions. The availability of these buttons depends on the specific vehicle to which the interface is being installed and if the aftermarket radio supports them. In addition to button remapping, we offer the option to assign dual functions to each button on the steering wheel. This means that every button can be programmed to execute both a short press command and a long press command. You can also add your own bespoke configuration. Button configuration can be done by PC, MAC and smart phone via the USB port.

Button Remapping instructions can be found in a separate guide on our website.

CONNECTION DIAGRAM

