


Installation Guide

Part No: APVVW01 OEM Reverse camera retention

powered by

Aerpro[®]
First Choice

Connects[®]
2

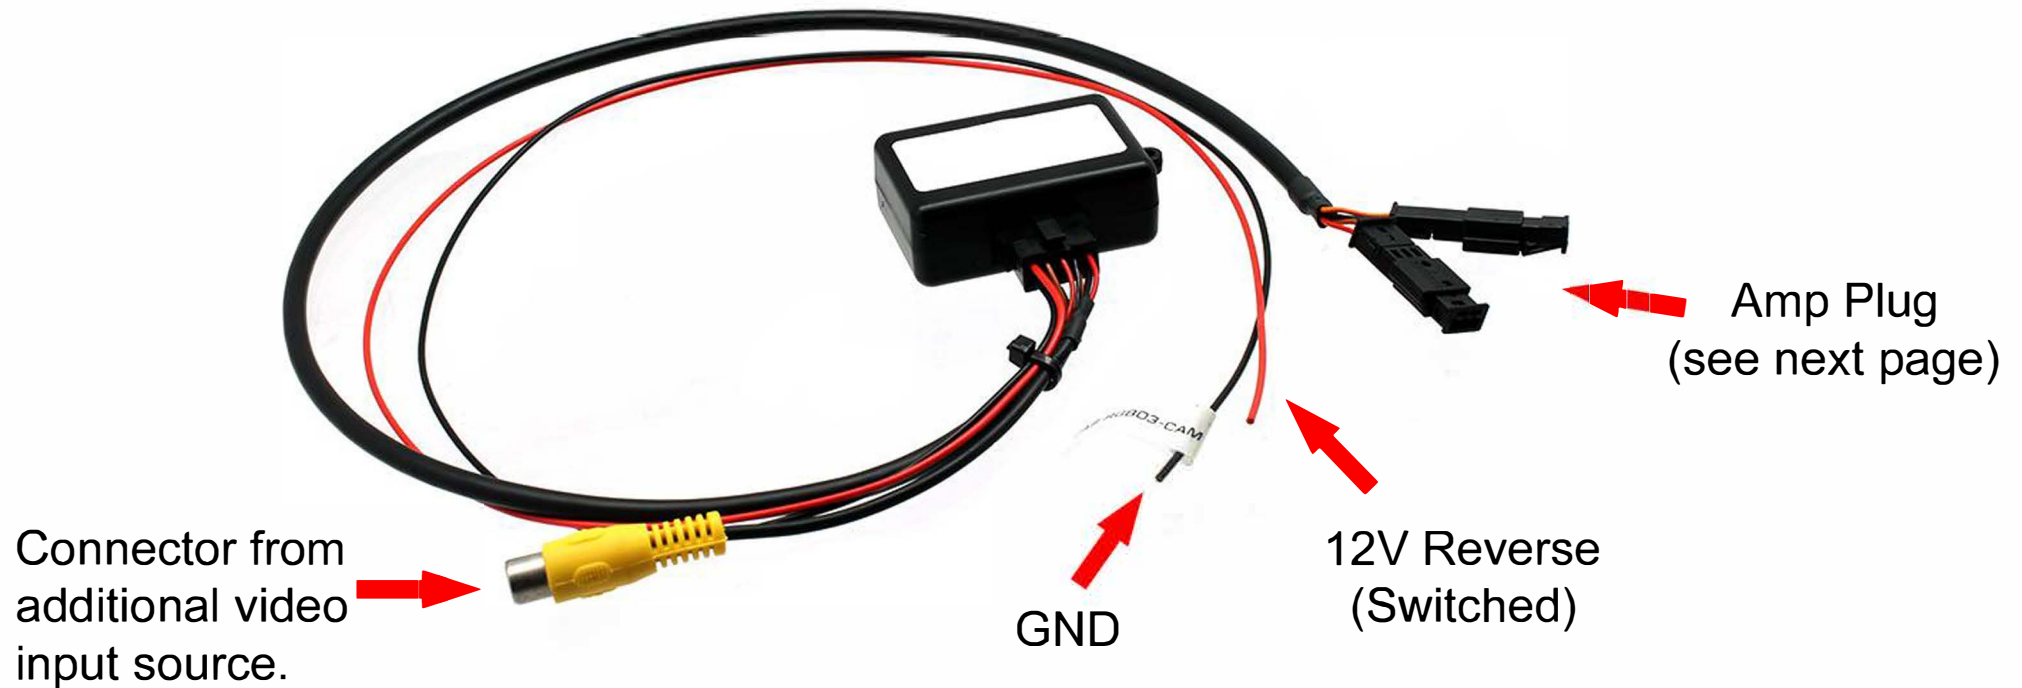

Connect Black wire to Ground.

Connect Red wire to Switched Reverse 12V

Connect the yellow RCA connector to the RCA output connector on the video source.


CAM-VW1-AD

CAM-VW1-AD - This Interface allows for the connection of a video source in conjunction with a factory-fitted VW rear view camera.

Connection Assignment:


Connection	VW - 26Pin AMP plug		Harness - 2Pin Tyco plug
RGB - Synchron	Pin 12	→	Pin 1
RGB - Ground	Pin 11 or Pin 24	→	Pin 2
Connection	VW - 26Pin AMP plug		Harness - 3 Pin Tyco plug
RGB Signal – Green	Pin 13	→	Pin 1
RGB Signal – Red	Pin 26	→	Pin 2
RGB Signal - Blue	Pin 25	→	Pin 3
Power:			
+12 Volt	→ Switched plus		● Red
Ground	→ Ground		● Black

Attention: The numbering on the 26 pin plug may vary!

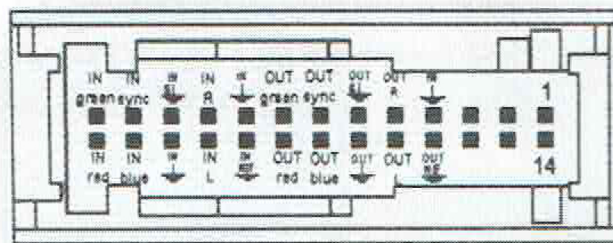

VW 26 pin plug

Slide the plastic cover from the 26 pin AMP Plug, located inside the Quadlock (fakra) plug and remove pins 11/12/13/25/26.
(Tip: Note the original VW cable colours to the pin numbers).

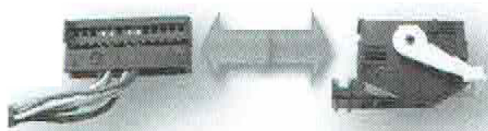

Use the connection assignment above to connect the open VW rear view camera wires with the 2 and 3 pin sockets from the CAM-VW1-AD.

