

10. Finally, clip the air vents and clock into position to complete the installation

#### Notes:

- 1) The installation must be completed with great care.
- Some cables/wiring might need to be extended (depending on model/equipment).
- 3) Metal clips are taken from the OEM stereo.




Land Rover Defender

#### Installation Manual

Part No.: CT23LR03 Piano Black

Part No.: CT23LR04 Black

#### **Double DIN Navigation**

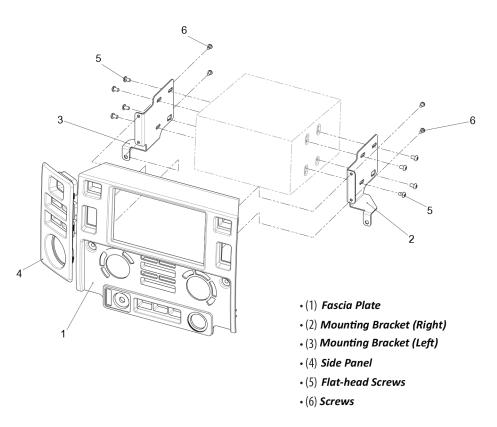

powered by



# ₀ MODEL NUMBER - FP9113

2.



1. Firstly, remove the OEM radio using a suitable tool

Remove the TX-30 Torx screws



# Land Rover Defender

3. Remove the fascia, and then remove any buttons/switches.

4. Separate the air vents from the OEM fascia using a suitable tool



 Remove the metal clips and reroute the air vent wiring (See image).



- 6. Measure the side panel and cut the dashboard accordingly.
  - Put the side panel back in.





## Land Rover Defender

8. Attach the 2-DIN stereo to the mounting brackets and fascia, and screw in place

9. Reinstall the radio and aftermarket fascia plate



7. Install the buttons/switches from your old fascia plate into your new one.

#### Land Rover Defender