

USER MANUAL

10:30PM

560

1 5

5

"太"

Mode

TO SUIT




Inclusions

- 1x Black (Satin) double DIN facia kit
- 1x Built-in HVAC & steering wheel control unit
- 1x Universal SWC patch lead
- 1x Antenna adapter
- 1x Chime retention kit
- 1x Mounting kit






Infodapter Controls

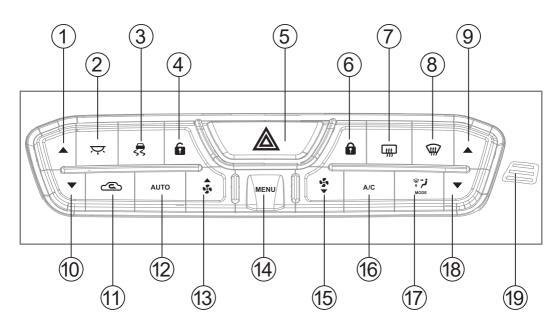

Steering Wheel Controls

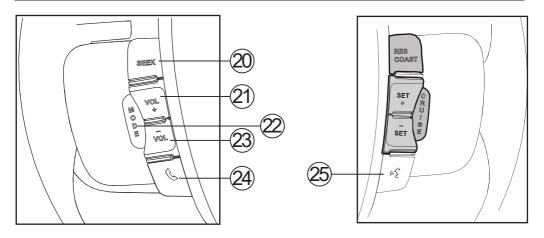



Button Functions

- 1. Temperature UP (Passenger side)
- 2. Interior light ON/OFF
- 3. Dynamic stability control ON/OFF
- 4. Door unlock
- 5. Hazard button
- 6. Door lock
- Rear demister (Push & hold for parking aid activation and deactivation)
- 8. Front demister

9. Temperature UP (Drivers side)10. Temperature DOWN (Passenger side)

- 11. Air circulation
- 12. Auto climate control
- 13. Fan speed
- UP/ Menu Navigation
- 14. System menu
- 15. Fan speed
- DOWN / Menu Navigation
- 16. Air conditioner
- ON/OFF

- 17. Mode
- 18. Temperature DOWN (Drivers side)
- 19. Temperature Sensor
- 20. Seek
- 21. Volume UP
- 22. Mode
- 23. Volume Down
- 24. Phone (No longer retained)
- 25. Voice Command button
 - -Short press to answer. -Long press to hang up


NOTE: The voice command button has be re-assigned to answer and hang up calls

NOTE: The Infodapter video output is NTSC by default.



Front Demister

Fresh air is blown through the heater core and then ducted to and distributed over the interior surface of the vehicles windshield

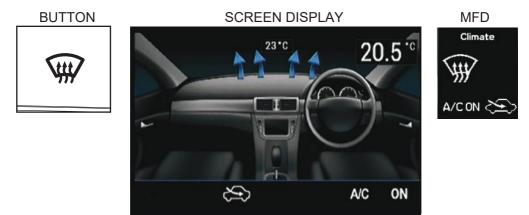

Rear Demister

The demister clears condensation from the rear window





Air Circulation Mode

Changes between fresh air drawn in directly from the outside of the vehicle, or recirculation where the air is drawn from inside the cabin





MFD Climate OFF







Climate

27.5^{°°}


AIC

ON

Interface Functions

Mode

Changes the vent positions for heating and cooling

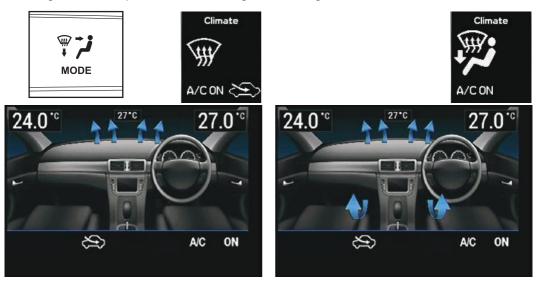




ON

8



Heating & Cooling Temperature

To increase temperature press up, to decrease temperature press down. Left hand side buttons adjust passenger side temperature settings. Right hand side buttons adjust drivers side temperature settings. Push & hold the **Auto** button to reset back to single zone. External temperature icon is in the top middle

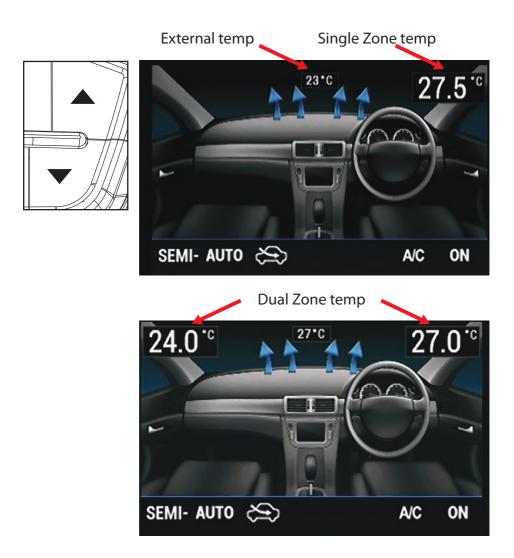




Air conditioning On or Off

Press to turn the air conditioning On/Off or vice versa. This can be changed and reversed in the setup menu. *Note: Holding down the A/C button completely turns the A/C heating and cooling system Off.*



Fan Speed Adjustment


Pressing these will turn the fan speed up and down. *Note:* Adjusting fan speed will also switch from auto to semi-auto climate control.

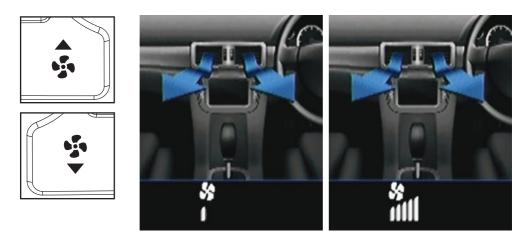



Auto Function

Press to automatically set the climate control to maintain a specified temperature.

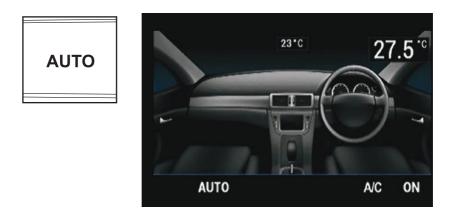

Auto Function (Semi Auto)

Adjusting the fan speed will also switch from auto to semi-auto climate control.





Door Unlock/Lock

Press to lock and unlock all doors in the vehicle





Dynamic Stability Control

Press to turn Dynamic Stability Control (vehicles traction control) on or off.



Interior Light

Press to turn the vehicles factory interior light on or off





Hazard Flasher Warning Light

Press to turn the vehicles hazard emergency light on or off





Menu Functions

Configuration Menu

Press and hold the menu button for a few seconds to display the Configuration Menu. Press the Fan UP/DOWN buttons to navigate up and down between sub menus. Press menu button to enter into sub menus and again to change settings.

	Configuration Menu	
MENU	Infodapter Settings	»
	Version	»
	< Back	


Menu Functions (Infodapter Settings)

Select Infodapter Settings/Preferences to access sub menus.

Infodapter Settings				
Preferences		»		
< Back				



Menu Functions (Infodapter Settings Continued)

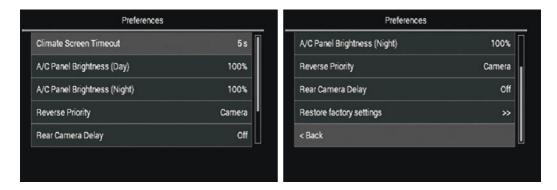

Climate Screen Timeout

Adjusts the time it takes the Infodapter screen to return to the Headunit Screen, by pressing the fan Up & Down buttons, select between 3 - 30 seconds

A/C Panel Brightness (Day mode)

Adjusts the brightness of the LED's on the Infodapter, by pressing the fan Up & Down buttons, select between 5% - 100%

A/C Panel Brightness (Night mode)

Adjust the brightness of the LED's on the Infodapter, by pressing the fan Up & Down buttons, select between 5% - 100%

Reverse Priority

Allows the selection of either the camera video feed or the park assist image when the vehicle is in reverse. Switchable via steering wheels **MODE** button. (Only appears in the menu if the camera connection setting is turned ON)

Rear Camera Delay

The camera image is displayed upon shifting out of Reverse (R) until the vehicle speed reaches 8 km/h. This occurs when the rear camera delay feature is on.

Restore Factory Settings


Restore all infodapter settings to default



Menu Functions (Infodapter Settings)

Installer Menu

When in the Configuration menu, press and hold the fan ${\bf UP}$ & ${\bf DOWN}$ buttons at the same time to access the installer menu

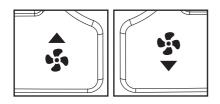



Air Conditioner Type

Choose between a single or dual climate system. *Note: Dual climate systems can run as a single zone system*



Menu Functions (Infodapter Settings)

Screen Size/ Position

Allows the user to change the Infodapter screen to fit to your headunits display

~	Screen Size / Position	/	-
	Menu Position	Hi	
	Horizontal Size	0	
	Horizontal Position	0	
	Vertical Size	0	
	Vertical Position	0	
K		2	N

Camera Connected

Turns the reverse camera function On or Off. Note: must be set to "Yes"

Diagnostics

Information on the system to check the vehicle is communicating with the Infodapter

lesys : Ford Falcon LR Power : RUN talkin : 0x8EØ Acc : On SWC : BUT_NONE Park : On Park Brake : On Femp : Air 23 Cab 32 Reverse Gear : No	Diagnostics					
alkin : 0x8£8 Acc : 0n SWC : BUT_NONE Park : 0n Park Brake : 0n femp : Air 23 Cab 32 Reverse Gear : No	MCU: INF043 Ford Falc	on	CAN msg : 166839			
SWC : BUT_NONE Park : On Park Brake : On Park Brake : On remp : Air 23 Cab 32 Reverse Gear : No	Filesys : Ford Falcon LR		Power : RUN			
Park Brake : On Femp : Air 23 Cab 32 Reverse Gear : No	Stalkin : 0x868		Acc : On			
Femp : Air 23 Cab 32 Reverse Gear : No	SWC : BUT_NONE		Park : On			
			Park Brake : On			
femn: L R Illumination : On	Temp: Air 23 Cab 32		Reverse Gear : No			
cmp: L — n — munnation. An	Temp: L R		Illumination : On			
Air: Face Radio: On	Air: Face		Radio : On			
A/C : Fresh Fan(0)	A/C : Fresh	Fan(0)				



INSTALLATION MANUAL

5

2



1 6

10:30PM



Tools Needed

Use the following tools to make dismantling the car and the installation of the new facia easier


- 0
 - 3. Socket 7 & 8 mm

1. Panel Remover

2. Phillips Head Screwdriver



4. Side Cutters

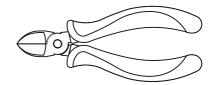

- 6. Cable Ties

5. Small Pick



7. Electrical Tape





Centre Console Disassembly

Eject any compact disks that may still be in the factory unit.

Remove the rubber coasters at the base of each cup holder to reveal Philips head screws and remove them. Once the screws are removed, the cup holder will lift out of place.

The trim around the gear shift lever follows. This trim piece is clipped into place and can be removed by applying gentle and even pressure with a panel removal tool.

Move the gear shift lever down to the "D" drive position.





Centre Console Disassembly

Firmly pull the storage compartment outward towards you. Once unclipped, disconnect the wiring harness for the accessory socket, take out the pocket, and place it aside.





OEM Headunit Removal

Removing retaining bolts

Using a 8mm socket driver or ratchet, remove the 2 short bolts at the back and an 8mm socket for the two long bolts on the sides to loosen the factory unit at the bottom.



OEM Headunit Removal

Removing top panel trim

Using a flat pry tool, carefully leaver the top panel up at the side and remove.



Removing facia

Remove the two phillips head screws at the top and unplug the OEM monitor connectors.





OEM Headunit Removal

Holding the factory unit at the top and bottom, pull the unit back towards you to remove.





OEM Headunit Disassembly

Removing factory headunit face plate

Place the unit on a soft surface to remove the screws holding the left & right side brackets on.







OEM Headunit Removal

Undo the 3 screws holding the factory vent in place. Put aside screws to be reused.







OEM Headunit Disassembly

Remove the cable from the retaining clip on the side of the vent. Remove the vent and put aside.





Changing The Dip Switch

DIP switches can be changed to match the headunit and rear camera being used with this installation kit. Make these changes before installing the kit. Check the rear camera and steering wheel control requirements for your devices. **Step1.** Access the DIP switches via the cutout on the back of the Infodapter **Step2.** Using a pick tool, flick the switches to the required setting



Dip Switch Settings

Up = On, Down = Off



- 1: Pioneer & Sony code change. Dip 1 is ON for Pioneer models, Dip 1 is OFF for Sony models. Check your headunits menu first to make sure the steering wheel controls are activated. Refer to page 2-19 of this manual for more information. Default is ON for most other models.
- **2:** Setting for reverse camera. ON = PAL, OFF = NTSC. The default setting is OFF (NTSC).
- **3:** Resets the display settings back to default. If the display settings have been manipulated in a way that it is no longer possible to make adjustments, change the DIP switch #3 from OFF to ON and back. This will reset the screen settings to the factory defaults. During this procedure the screen background will change to red. While the background is red, no settings can be made.
- 4: Not applicable



Vent Assembly

Reattaching the vents


Place the new kit, face down on a soft surface. Place the factory vent into position and secure using the 3 screws retained earlier.





Attach the metal brackets supplied to the facia using the four supplied screws.

Place the headunit into the mounting brackets and loosely attach with screws on either side. Adjust the headunit to the desired depth before tightening the mounting screws on both sides.

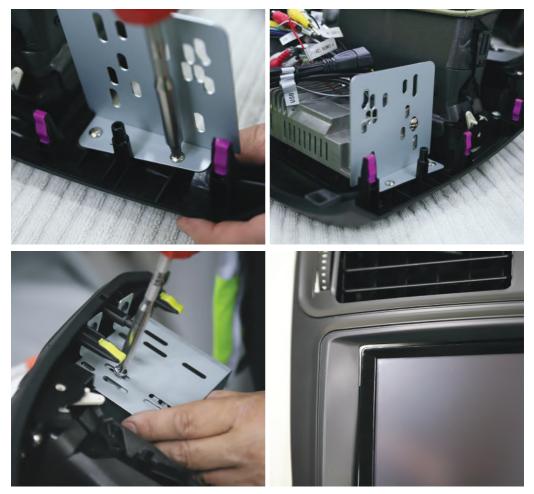




Connect the main harness to the control unit. The wires can be routed up through the cable management clip on the vent.



Connect the 4 pin video plug, and connect the yellow RCA plug to the reversing camera input on the aftermarket head unit. Connect the purple reverse output wire to headunit reverse trigger. This will allow the climate controls to display on the aftermarket head unit. The reversing camera wiring must be completed between the facia and the aftermarket radio. Otherwise the vehicle's display will not show on the aftermarket screen. The female yellow RCA socket connects to the reverse camera.

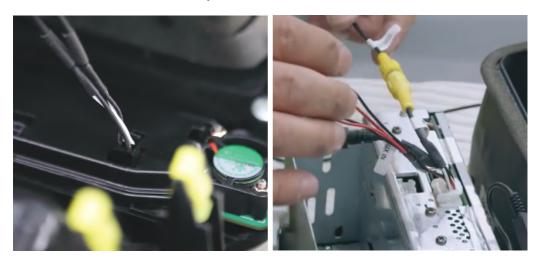




Connect the camera retention harness if required using the 24Pin plug. The camera will need to be enabled in the info menu. Connect the SWC patch lead, making sure it is in the correct configuration for your brand of headunit.




Plug the other end of the SWC patch lead into the aftermarket headunit's steering wheel remote input. Connect the brand specific secondary harness (Aerpro App8 series sold separately) into the aftermarket headunit. **NOTE:** *It is important to connect brand specific or correctly modified universal patch lead to module before powering up.*

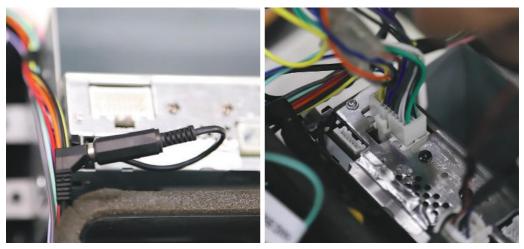




Connect the ISO connectors from the main harness to the secondary harness. Connect any other cables like park brake, reverse and speed pulse if available. Tape up any unused cables. Tape up the now obsolete plug at the top so it does not rattle around.

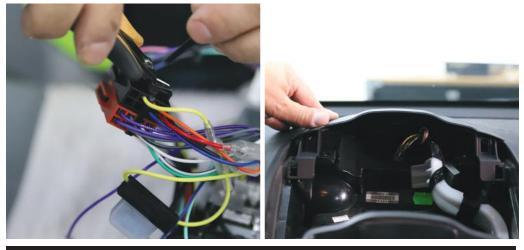

OEM Reverse Sensor

Retaining the OEM reverse sensor alerts

Connect the reverse sensor module to the main harness then connect the 2 pin speaker connector. Securely mount the module and speaker in an appropriate position.

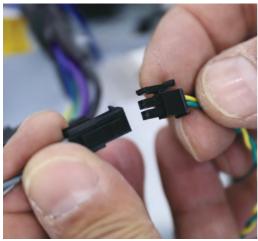





Plug the main harnesses and antenna adapter into the vehicle. Place the entire unit into the vehicle resting at the top, making sure all of the cables are out of the way. Gently push the unit into place.




Switch the vehicle to ignition and test all functions such as steering wheel controls, audio, illumination of the HVAC buttons, and climate controls. Once all functions have been tested successfully, re-install the centre console in the reverse order of removal.






Wiring diagram

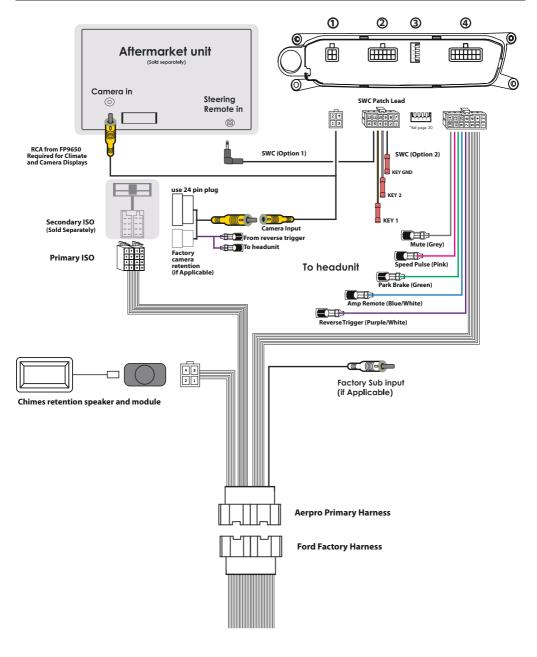



SWC Patch Harness Configuration

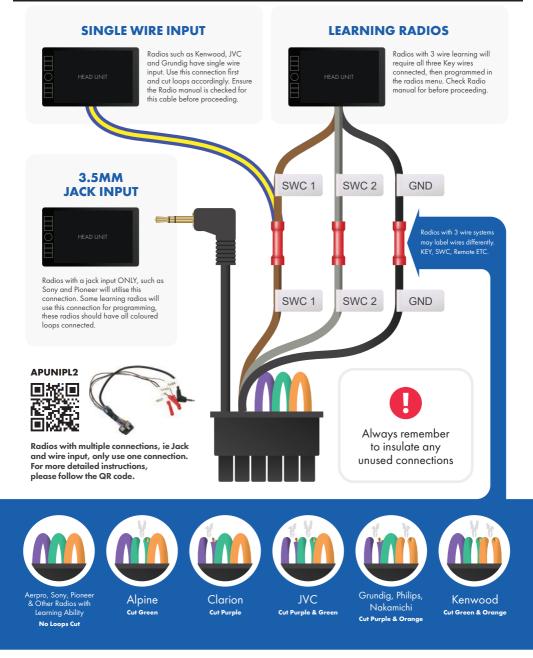



SWC Patch Harness Configuration

Kenwood/JVC: Some Kenwood and JVC radios have 2 steering control inputs. A 3.5mm socket (Remote IN) and Blue with Yellow trace wire. To send direct translated codes to your Kenwood/JVC radio, configure the patch lead up as Kenwood or JVC outlined in the configuration assignments and connect the Brown patch lead wire (KEY 1) used. If you would like to be able to program your steering controls configure the patch lead as Self Learn and plug the 3.5mm Jack into the Remote IN of the Kenwood/JVC, disregard the Brown wire.

Pioneer : Some Pioneer models require the steering controls to be enabled they will by default OFF. These steering control settings are located in the system settings of the radio can only be accessed whilst the unit is in standby mode and the park-brake wire is connected (if applicable). Please refer to your Pioneer manual on exact methods for enabling steering controls.

Sony: Recent Sony models may give you incorrect SWC button results after installing a control harness. This is due to a slight change in input codes on the newer Sony radios. To resolve this please do the following steps:

- Remove the steering control harness from the vehicle.
- Remove the plastic casing from the black steering control box.
- Locate the very small dip switch selector on the board
- Turn dip switch 4 OFF.
- Re-assemble and test.

There is also some Sony radio's that default steering controls off. If you are receiving no steering control functions at all please refer to your Sony manual on how to enable steering controls.

General: Please ensure all connections to your aftermarket head unit (including patch lead modification) are completed before power is provided to the harness. Some of our control harnesses work by translating the vehicles CANBUS data and can only start this process on ignition. If you find that you are not getting any response from your steering controls on accessory (single key click) please re-test on ignition.

Note: The steering controls must be working in the vehicle previously to work with our control harnesses. They will not fix a previous underlying problems.



Technical assistance

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support. Australia

TEL: 03 – 8587 8888

FAX: 03 – 8587 8866



Mon-Fri 9am – 5pm AEST

Please retain this user guide for future reference.

This manual is considered correct at time of printing but is subject to change. For latest manuals, updates and video installation guide refer to the website.

If you would like to find more information on this product or download an up to date digital copy of this manual, please visit the https://aerpro.com website and search for your model or scan the QR code below.

aerpro.com/FP9660SK



Copyright © 2024 by TDJ Australia

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author.



Installer Notes